




# MReX TELEMETRY and MESSAGING TRANSCEIVER MODULE

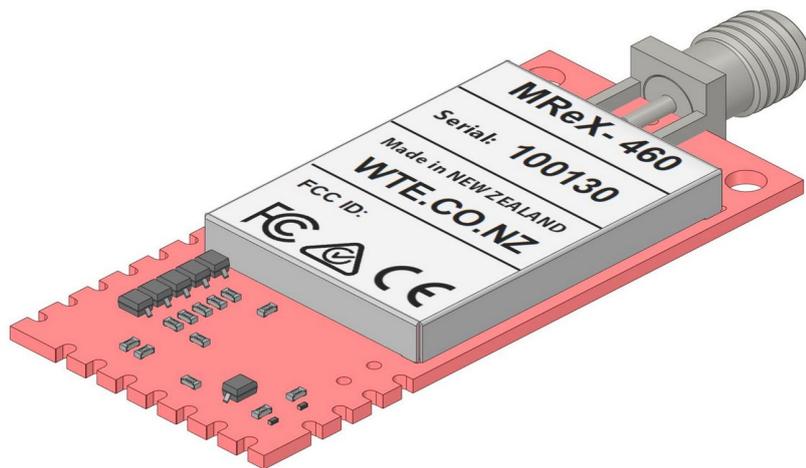

## User Manual



## Table of Contents

Introduction.....	4	*IN_MSG_H.....	26
MReX Features.....	4	Output Commands.....	27
MReX Versions.....	5	*OUT_CONFIG.....	27
Safety Information.....	6	*UNIT_ID.....	27
Operation.....	10	Protocols.....	28
DMR Messaging.....	11	WT Protocol.....	28
Configuration.....	12	Support for Multiple Messages.....	30
Transmit Commands.....	13	DMR Message Format.....	31
*TX_FREQ.....	13	RAW Protocol.....	32
*TX_BAUD.....	13	*RAW_CONFIG.....	32
*TX_PROTO.....	13	Serial Point to Point Operation.....	33
*TX_MODE.....	14	*SERIAL_LINK.....	34
*TX_LEVEL.....	14	Input Handling.....	36
*TX_CAP.....	14	Output Handling.....	38
*TX_PERIODIC.....	14	WTE Output Control Protocol.....	39
*TX_PREAMBLE.....	15	Introduction.....	39
*TX_PWR.....	16	Format.....	39
Receive Commands.....	17	Examples:.....	40
*RX_FREQ.....	17	Remote Command Output Format.....	41
*RX_BAUD.....	17	Examples:.....	41
*RX_PROTO.....	17	Store Forward Operation.....	43
*RX_MODE.....	18	Installation.....	44
*RX_RANGE.....	18	Cables Supplied.....	44
*RX_BUSY.....	18	Connecting to the MReX.....	45
*RX_ENABLE.....	19	Module Pin descriptions.....	46
Base Commands.....	20	Input Hardware Connection.....	47
*REBOOT.....	20	Output Hardware Connection.....	48
*CONFIG.....	20	MReX Mounting Details.....	49
*SAVE.....	20	OEM Integration.....	51
*LIST.....	20	Power Supply.....	51
*DEFAULTS.....	20	Generic Digital Interfaces.....	51
*FREQ_OFFSET.....	21	Antenna RF interfaces requirements.....	51
*SERIAL_LINK.....	21	Label and compliance information.....	52
*VER.....	21	MReX Firmware Upgrade.....	53
*IO.....	21	Firmware Upgrade Utility.....	53
*BYPASS.....	22	Firmware Upgrade Process.....	54
*RSSI.....	22	Antenna.....	55
*LOW_BATT.....	23	Omni antenna.....	55
*LAB.....	23	Directional antenna.....	55
Store Forward Commands.....	24	Antenna Elevation.....	55
*STORE_FWD.....	24	Disclaimer.....	58
Input Commands.....	25	Manufacturing marking and labels.....	59
*IN_CONFIG_L.....	25	Maintenance.....	59
*IN_CONFIG_H.....	25	Product End Of Life.....	60
*IN_MSG_L.....	26	Product Warranty.....	61



Specification.....62 |



## Introduction

---

Thank you for choosing the MReX.

The MReX is a low cost, very high sensitivity transceiver module for mobile paging and general telemetry use. The MReX is also a compliant mobile and base station transmitter.

The MReX has a “single modular” type approval, meaning that the module can be incorporated into other products, in some cases with no required testing for FCC and CE compliance. This can result in a very short time to market for products

## MReX Features

- Sends and receives 512, 1200 and 2400 baud POCSAG paging messages.
- Transmits DMR Tier 1 text messages (optional).
- Sends telemetry data from 512 baud to 9600 baud
- Paging store and forward repeater operation with configurable duplicate reject (optional).
- Point to point wireless serial link operating at speeds up to 9600 baud. In this manner a wireless transparent serial link can be achieved.
- 5 inputs. One Input may be reconfigured to be an open collector output.
- Configured inputs can be programmed to send POCSAG and DMR messages simultaneously when triggered.
- Configured output can be controlled via paging message.
- Periodic message support to ensure link integrity.
- Firmware upgradable.
- High stability 0.5PPM oscillator ensuring minimal drift over the entire specified temperature range.
- Output power up 100mW.
- Operation from 421 to 480 MHz.
- High sensitivity receiver (-127dBm at 512 baud).
- Upgradable to enable store and forward repeater functions after purchase of a licence.
- Operation through external power supply (5-9Vdc) or 3V battery pack.
- Autonomous operation without the need for any host processor.
- Compliant as mobile and base station transceiver meaning that the user can select a suitable antenna for best performance.
- Supported channel spacing of 25kHz, 12.5kHz and 6.25kHz.



## **MReX Versions**

The MReX can be supplied as these variants:

- MReX-460 (421MHz to 480MHz) Telemetry and Messaging Module.
- MReX-460-SF Store and Forward Repeater with IO.
- MReX-460-5IO Telemetry and messaging Transceiver.
- MReX-460-5B 5 Button Handheld Messaging Transmitter.

## Safety Information

---

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it.

The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



This is the safety alert symbol. It is used to alert you to a potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **⚠ WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### **⚠ CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury

### **NOTICE**

**NOTICE** is used to address practices not related to physical injury.



**⚠WARNING**

**LOSS OF CONTROL**

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and over travel stop.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of anticipated transmission delays or failures of the link.

**Failure to follow these instructions can result in death or serious injury**

**⚠WARNING**

To comply with both **FCC RF Exposure** requirements in section 1.1310 of the FCC Rules and EN50383, antennas used with this device must be installed to provide a separation distance of at least 8 cm from all persons to satisfy RF exposure compliance.

**DO NOT:**

- Operate the transmitter when someone is within 8cm of the antenna. EN50383 regulatory limits have deemed that 8cm is a safe clearance distance from this product while operating at full power.
- Operate the transmitter unless all RF connectors are secure and any open connectors are properly terminated.
- Use within 15cm of sensitive electronic devices and medical equipment while operating at full power.
- Operate the equipment near electrical blasting caps or in an explosive atmosphere. All equipment must be properly grounded for safe operations.

**⚠WARNING**

**THIS EQUIPMENT IS NOT INTENDED FOR MAINS VOLTAGES**

- The MReX was **NOT** designed to operate and/or be connected directly to live main voltages. The MReX must be connected to a certified, suitably rated low voltage DC supply.

**Failure to follow these instructions can result in death or serious injury**



## NOTICE

### HAZARD OF EQUIPMENT DAMAGE

- This product is not chemical resistant, detergent, alcohol, aerosol sprays, and/or petroleum products may damage the front panel. Clean using a soft cloth moistened in water.
- The radio can be damaged if there is any potential difference between the chassis-ground, Serial signal ground, power (-) input, or antenna coaxial shield. Before connecting any wiring, ensure that all components are earthed to a common ground point.
- The antenna port will be damaged if signals greater than 13 dBm are injected/received.
- Do not connect any other transmitter to the RF connector or share the antenna with any other device.
- Extreme Heat or High temperatures can damage MReX components. DO NOT expose or operate the unit in extreme heat (above 70 degrees Celsius) or leave in direct sunlight or any other UV source.
- Although this product is designed to be rugged, it will not survive excessive shock or vibration abuse.
- The MReX IP rating is IP-51. This product is not waterproof or dustproof. DO NOT directly expose to rain or use in a condensation forming environment.
- When antennas are co-located on a community (shared) site the correct site engineering must be performed to ensure that RF exposure limits are met.

## NOTICE

### CARE REQUIRED WHEN TRANSPORTING

Safety and care must be taken when transporting, handling, installing and/or replacing radio equipment.

- Packaging should be adequate to ensure connectors are not damaged
- Store and handle the radio equipment in dry, clean safe environment
- Handle the equipment with care
- Care when stacking MReX boxes must be taken to not damage part of the radio, such as connectors.

## FCC NOTICE

This device complies with Part 15.247 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

This device must be operated as supplied by the equipment supplier. Any changes or modifications made to the device without the written consent of the equipment supplier may void the user's authority to operate the device.

End user products that have this device embedded must be installed by experienced radio and antenna personnel, or supplied with non-standard antenna connectors, and antennas available from vendors specified by the equipment supplier. Please contact the equipment supplier for end user antenna and connector recommendations.

Exposure to RF energy is an important safety consideration. The FCC has adopted a safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated equipment as a result of its actions in General Docket 79-144 on March 13, 1996.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 11cm between the radiator and any part of your body

## NOTICE



This symbol on the product or its packaging indicates that this product must not be disposed of with other waste.

Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment.

The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and help ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, contact the dealer from whom you originally purchased the product.



## Operation

---

When the MReX is operating normally, the status green LED flashes briefly once every second. When Decoding messages, the green LED is held on for approximately one second. When transmitting the green LED flashes approximately 3 times a second and if fitted, the red LED will illuminate for the duration of the transmission.

Under normal operation, on start-up there is a sign-on message sent out the serial port. The sign on message indicates the firmware revision, serial number other software related information.

After start-up the MReX enters its receive and decode mode of operation, waits for commands to be entered serially for processing or inputs to be triggered. These may be either protocol messages to be transmitted or commands related to the configuration of the device.

**Note:** If the MReX is being used in SERIAL\_LINK mode the MReX will only accept configuration commands on its first 10 seconds after power up to prevent accidental misconfiguration. After this time configuration commands will be ignored. Please refer to **Serial Point to Point Operation** in this manual for further information.

When messages are received and decoded, they are immediately sent out the serial port in the format of the configured protocol in use.

Messages are transmitted as per the input configuration when inputs change state. Please refer to **Input Output Hardware Connection** or **Input Handling** sections on this manual for further information.

The output is driven high or low, or for a particular period of time depending on configuration. The outputs are controlled via the **WTE Output Control Protocol** message received and decoded.



## DMR Messaging

---

The MReX supports the transmission of short Digital Mobile Radio text messages, allowing direct messaging to DMR radios. This is an optional feature.

The MReX has a partial implementation of the ETSI TS 102 361-1 DMR standard allowing for DMR “Tier 1” messaging and therefore cannot be used in systems that have repeaters.

This is not a full implementation, and as a result has the following restrictions:

- Messages are limited to a maximum length of 50 characters.

DMR messages can be sent when an input is triggered or through use of the WT protocol in a similar manner as sending POCSAG paging messages. Refer to WT Protocol for usage information.

The MReX concurrently supports POCSAG and DMR paging, allowing an input to send messages to both legacy paging systems and newer DMR radios.

Different DMR manufacturers have interoperability limitations. The MReX is similar in this regard. Please refer to the Specification section for a list of tested DMR radios. The MReX WT protocol allows for switching between supported radio types to allow support for Hytera, Kirisun and other brands.



## Configuration

---

Parameters can be changed using any common serial terminal program. A serial terminal program that also allows saving and loading of configuration files can be downloaded from [wte.co.nz/tools.html](http://wte.co.nz/tools.html)

Start-up operation is always at 9600:8-N-1.

All configuration commands always start with the asterisk '\*' character.

All messages that do not start with the \* character are processed by the protocol decoder.

All messages are terminated by a Carriage Return character, shown in this manual as <CR>

All commands that accept a value, can have that value read back by using the '?' suffix. E.g.

```
*TX_FREQ?
```

Returns

```
*TX_FREQ=460000000 (for example)
```

There are some commands that support multiple entries (such as the same command but for different ranges). In this case the question mark can be followed by the parameter to be interrogated. E.g.

```
*RX_RANGE?<CR>
```

Returns (lists all ranges)

```
*RX_RANGE=1:8,2000000
```

```
*RX_RANGE=2:0,0
```

```
*RX_RANGE=3:0,0
```

```
*RX_RANGE=4:0,0
```

To find the first range only, usage would be:

```
*RX_RANGE?1<CR>
```

Returns

```
*RX_RANGE=1:8,2000000
```

**Note:** It is a good practice to restart the unit after changing configuration. This can be achieved by removing power to the unit or sending the *\*REBOOT<CR>* command.



## **Transmit Commands**

---

### **\*TX\_FREQ**

\*TX\_FREQ specifies the transmit frequency in Hz e.g.

*\*TX\_FREQ=458600000<CR>*

### **\*TX\_BAUD**

\*TX\_BAUD Specifies the baud rate and channel width of the transmitter when using a protocol that does not permit a baud rate and channel width to be specified.

This includes whether the modulation is 2 or 4 levels GFSK plus the channel width:

512\_25 indicates 512 baud with 25kHz channel spacing (2 level GFSK).

1200\_12 indicates 1200 baud with 12.5kHz channel spacing (2 level GFSK).

4800-4L\_6 indicates 4800 baud with a 6.25kHz channel spacing (4 level GFSK).

*Accepts: 512\_25, 512\_12, 512\_6, 1200\_25, 1200\_12, 1800\_12, 2400\_12,  
4800\_12, 4800-4L\_6, 9600-4L\_12*

Typical usage:

*\*TX\_BAUD=512\_25<CR>*

### **\*TX\_PROTO**

\*TX\_PROTO specifies the protocol to apply for serial input. Accepts WTE and RAW e.g.

*\*TX\_PROTO=WTE<CR>*

**Note:** See protocol section for more details on protocols and configuration.



### **\*TX\_MODE**

\*TX\_MODE specifies the transport method of the transmitter (how the information is transmitted over the air).

- POSCAG\_A must be used in order to transmit alphanumeric messages.
- POSCAG\_N must be used in order to transmit numeric messages.
- WTE\_EN must be used in order to transmit 8 bit characters (POSCAG\_A transmits 7 bit characters only).

Accepts POSCAG\_A, POCSAG\_N and WTE\_EN. E.g.

```
*TX_MODE=POSCAG_A<CR>
```

### **\*TX\_LEVEL**

\*TX\_LEVEL specifies the default level of messages transmitted. This is sometimes referred to as “Beep Level”. This is a value 0-9, however, when POCSAG is the transport method, only 0-3 will be used. E.g.

```
*TX_LEVEL=3<CR>
```

### **\*TX\_CAP**

\*TX\_CAP specifies the default code used to identify transmissions (same as the RIC code). The TX\_CAP code would only be used by protocols that do not require the CAP code to be specified. This code can be any number between 8 and 2000000. E.g.

```
*TX_CAP=1234567<CR>
```

### **\*TX\_PERIODIC**

\*TX\_PERIODIC allows a periodic message to be transmitted. This could be used as a “heartbeat” to confirm that the system is continuing to operate as expected.

```
*TX_PERIODIC=TT,MMMM<CR>
```

where:

TT is the time in seconds between transmissions (0-255. 0 disables the feature).

MMMM is the periodic message to transmit (up to 50 characters). E.g.

```
*TX_PERIODIC=10,WT1234560A10 Test_Message<CR>
```



## **\*TX\_PREAMBLE**

\*TX\_PREAMBLE set the preamble length in multiples of 32 bits.

Short preambles allows the messages to be transmitted quickly.

Long preambles are typically used in conjunction with a matching receiver to save battery power when the receivers is in deep sleep mode.

The POCSAG standard uses a setting of 18 (576 bits). This very long preamble means that paging receivers need only to wake once per second (at 512 baud) in order to check for an incoming message. If the receiver is always powered and receiving, then much shorter preambles can be used, and in some cases halve the channel activity.


*Typical usage:*

```
*TX_PREAMBLE=18<CR>
```



**\*TX\_PWR**

\*TX\_PWR set the Transmitter Power Output levels. Levels value ranges from 0 to 127, please use the following graph to determine the transmitter level value to use. Note that settings above 80 will have very little effect on output power.

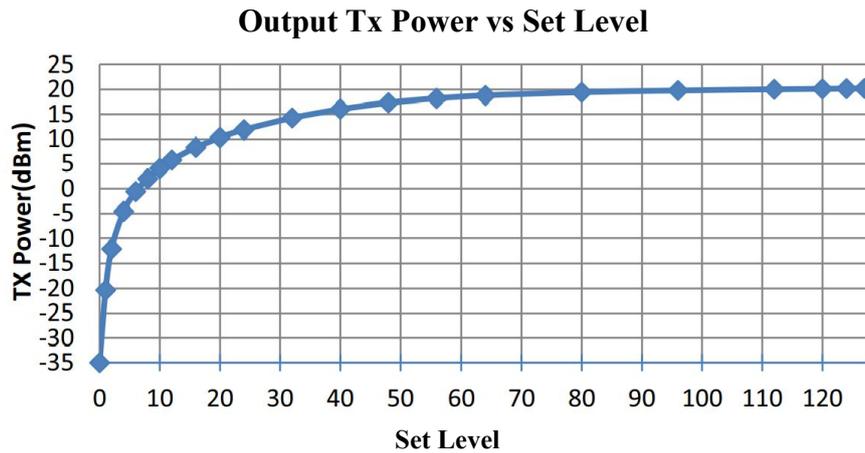

Examples :

Setting MReX to transmit at 10mW (10dBm ±2dBm):

*\*TX\_PWR=20<CR>*

Setting MReX to transmit at 50mW (17dBm ±2dBm):

*\*TX\_PWR=55<CR>*

Setting MReX to transmit at 100mW (20dBm ±2dBm):

*\*TX\_PWR=80<CR>*



## Receive Commands

---

### **\*RX\_FREQ**

**\*RX\_FREQ** specifies the receive frequency in Hz (range limited to the variant of product) e.g.

*\*RX\_FREQ=460000000<CR>*

### **\*RX\_BAUD**

**\*RX\_BAUD** specifies the baud rate and channel width of the receiver.

This includes whether the modulation is 2 or 4 levels GFSK plus the channel width:

512\_25 indicates 512 baud with 25kHz channel spacing (2 level GFSK).

1200\_12 indicates 1200 baud with 12.5kHz channel spacing (2 level GFSK).

4800-4L\_6 indicates 4800 baud with a 6.25kHz channel spacing (4 level GFSK).

*Accepts: 512\_25, 512\_12, 512\_6, 1200\_25, 1200\_12, 1800\_12, 2400\_12,  
4800\_12, 4800-4L\_6, 9600-4L\_12*

*Where:*

*Typical usage:*

*\*RX\_BAUD=512\_25<CR>*

### **\*RX\_PROTO**

**\*RX\_PROTO** specifies the protocol to apply for serial output, accepts WTE, RAW. See protocol section for more detail on protocols and configuration. E.g.

*\*RX\_PROTO=WTE<CR>*



### \*RX\_MODE

\*RX\_MODE specifies the transport method of the receiver (how the information is received over the air).

- POSCAG\_A must be used in order to receive alphanumeric messages.
- POSCAG\_N must be used in order to receive numeric messages.
- WTE\_EN must be used in order to receive 8 bit characters (POSCAG\_A transmits 7 bit characters only).

Accepts POSCAG\_A, POCSAG\_N, WTE\_EN and FLEX. E.g.

*\*RX\_MODE=POSCAG\_A<CR>*

### \*RX\_RANGE

\*RX\_RANGE specifies up to 4 CAP RX ranges for decoding. Messages received with CAP codes not allowed on the RX\_RANGE will be discarded by the receiver.

\*RX\_RANGE=N:LLLLLL,HHHHHH (where N is the range between 1 and 4, LLLLLL is the lowest cap code to match, HHHHHH is the highest). E.g.

*\*RX\_RANGE=1:8,200<CR>*

### \*RX\_BUSY

\*RX\_BUSY Enables the BUSY alert and channel busy level for the configured channel.

\*RX\_BUSY=BB

Where:

BB is the signal level from 0 to -130 (in dBm).

In this example the channel will be considered “busy” if signal strength is above -80dBm.

*Typical usage:*

*\*RX\_BUSY=-80<CR>*



**\*RX\_ENABLE**

\***RX\_ENABLE** Enables or disables the receiver. When the receiver has been disabled, the MReX will use less than 1uA standby current and will be able to be powered from a CR2032 coin cell. By default the receiver is enabled. When the receiver is disabled, the green LED will only flash prior to a transmission.

*Typical Usage:*

*RX\_ENABLE=0<CR>*



## **Base Commands**

---

### **\*REBOOT**

**\*REBOOT** forces the unit to immediately restart.

*Usage:*

*\*REBOOT<CR>*

### **\*CONFIG**

**\*CONFIG** displays current configuration.

*\*CONFIG<CR>*

### **\*SAVE**

**\*SAVE** saves all configuration settings (all config changes are restored on start-up).

*Usage:*

*\*SAVE <CR>*

### **\*LIST**

**\*LIST** displays all available commands. This command also lists many specific field names that need to be used with listed commands.

*Usage:*

*\*LIST<CR>*

### **\*DEFAULTS**

**\*DEFAULTS** forces to reset temporary to factory default settings. The user must issue the *\*SAVE<CR>* command in order to write these default settings to internal memory.

*Usage:*

*\*DEFAULTS<CR>*



### **\*FREQ\_OFFSET**

\***FREQ\_OFFSET** specifies an offset to compensate for errors and to allow calibration of the internal frequency reference (in Hz). E.g.

*\*FREQ\_OFFSET =-200<CR>*

### **\*SERIAL\_LINK**

\***SERIAL\_LINK** sets default RS232 point to point configuration. See **Serial Point To Point Operation**

*Usage:*

*\*SERIAL\_LINK<CR>*

### **\*VER**

\***VER** sends the MReX sign on message back to the user. This is useful to determine the model and serial number of the unit.

*Usage:*

*\*VER<CR>*

### **\*IO**

Returns all input and output states.

*Typical usage:*

*\*IO<CR>*

*Typical output:*

*IO=I:01000 O:0*

*In this typical output, there are 5 inputs shown. Output state follows (valid only if output is configured)*



### **\*BYPASS**

Allows messages to be entered via serial to simulate as if decoded across the air. This can be useful for testing.

Commands take the format:

**\*BYPASS**=[1234567:1]Message\_Payload

Where:

[ is the character '['

1234567 is the simulated RIC

: is the character ':'

1 is the beep level of the messages

] is the character ']'

Message\_Payload is any message to inject as if received across the air.

*This message will now be processed according to the configured RX\_PROTO configuration.*

*Typical Usage 1:*

**\*BYPASS**=[1234567:1]Test Message<CR>

“Test Message” will be added to the received message serial output, as if received across the air.

*Typical Usage 2:*

**\*BYPASS**=[1234567:1][[01]U0[\*REBOOT]]<CR>

*The unit will reboot the unit, please refer to WTE Output Control Protocol section on this manual for more information.*

### **\*RSSI**

**\*RSSI** returns the receiver signal strength in -dBm. (returns between 0 and -130).

*Usage:*

**\*RSSI**<CR>



**\*LOW\_BATT**

\***LOW\_BATT** specifies the voltage (multiplied by 10) that the low battery sounder will be heard at. This option is only used when \*RX\_ENABLE=0. When \*LOW\_BATT is set to 0, low battery checking is not performed. Max value is 33 (3.3 volts)

*Typical usage:*

*\*LOW\_BATT=26<CR>*

**\*LAB**

Set the unit in transmit mode, it can be configured to transmit carrier only or modulated. This feature together with the \*RSSI command are useful when antenna alignment is necessary.

\*LAB syntax:

*\*LAB=x,y<CR>*

Where:

x is used to:

- 1 – Enable Carrier only,
- 2 – Enable Carrier with random modulation,
- 0 – Disable Carrier

y is the time in seconds which the MReX will be transmitting for.

*Example carrier only for 60 seconds:*

*\*LAB=1<CR>*

*Example carrier only for 20 seconds:*

*\*LAB=1,20<CR>*



## ***Store Forward Commands***

---

For the MReX this is an optional feature that by default is not supplied.

Store forward operation is when the unit is used to listen to transmissions in the area, decode the messages and retransmit again to provide greater coverage than would normally be possible.

**Note:** In order to forward messages the decoded message CAP codes must fall within the configured CAP ranges.

### **\*STORE\_FWD**

Configures the store forward operation, this command uses 2 parameters as follows:

```
*STORE_FWD=XX,YY<CR>
```

Where:

XX is the **Store Forward Operation**

YY is the **Duplicate Reject Operation**

#### **Store Forward Operation:**

Setting to 0 disables the feature. The non zero value set is the delay in 100ms steps after each transmission. This delay allows time for any downstream forwarding equipment to clear the message. Max store forward delay is 24 seconds. All messages are immediately queued for transmission, and up to 5 messages may be retransmitted after the store forward delay.

#### **Duplicate Reject Operation:**

Setting to 0 disables the feature, otherwise this is the number of seconds to reject identical messages for up to 240 seconds. Duplicate rejection operates only on messages decoded for forwarding. This means that receiving of duplicate messages is not prevented (nor the transmission of same messages resulting from a protocol command), but when used as part of a simple store forward system re-queueing of messages can be controlled. Duplicate reject only tests the previous 5 messages in the historic transmit queue.

For example, to configure to use a 2 second clearing delay after each transmission and 10 second message duplicate reject:

```
*STORE_FWD=20,10<CR>
```

## ***Input Commands***

---

The input commands allow messages to be configured for transmission when changing state. Debouncing (how long an input is settled before acting on the new level) can be configured with the number of times to transmit the input message.

**Note:** Even if an input is configured to transmit a certain number of messages, should the input level change before all messages are transmitted, then the remaining transmissions will be cancelled.

Please refer to **Input Output Hardware Connection** section on this manual for examples of how to connect the input and output pins on the MReX board.

### **\*IN\_CONFIG\_L**

**\*IN\_CONFIG\_L** specifies all input Low configuration parameters. Inputs are triggered by connecting the input to ground for a time exceeding the specified debounce period. The input message is configured using the **\*IN\_MSG\_L** command. Usage is as follows:

**\*IN\_CONFIG\_L=I:N,D,R**

Where:

I = The input to configure (1-5 valid)

: = the colon character ‘:’

N = number of transmissions (0 = no transmissions, 9 is max tx count)

, = the comma character ‘,’

D = debounce in 100 ms steps (from 0-255)

, = the comma character ‘,’

R = time in seconds between retransmissions.

Example. Configure input 1 to send two message after input is debounced by 300 milliseconds and repeat/retransmit this message 4 times.

```
*IN_CONFIG_L=1:2,3,4<CR>
```

### **\*IN\_CONFIG\_H**

**\*IN\_CONFIG\_H** specifies all input High configuration parameters. Inputs are triggered by moving the input to a high state or released from GND for a time exceeding the specified debounce period. The input message is configured using the **\*IN\_MSG\_H** command. Usage is as follows:

**\*IN\_CONFIG\_H=I:N,D,R**

Where:

I = The input to configure (1-5 valid)



: = the colon character ‘:’

N = number of transmissions (0 = no transmissions, 9 is max transmission count)

, = the comma character ‘,’

D = debounce in 100 ms steps (from 0-255)

, = the comma character ‘,’

R = time in seconds between retransmissions.

Example:

```
*IN_CONFIG_H=1:1,10,15<CR>
```

## **\*IN\_MSG\_L**

**\*IN\_MSG\_L** specifies the low level message that will be transmitted if configured. E.g.

```
*IN_MSG_L=1:WT1234560A10 IN_1_LOW<CR>
```

## **\*IN\_MSG\_H**

**\*IN\_MSG\_H** specifies the high level message that will be transmitted if configured. E.g.

```
*IN_MSG_H=1:WT1234560A10 IN_1_HIGH<CR>
```



## Output Commands

---

The output commands allows the output to be enabled (disabling input 1). Following configuration of the pins as outputs, they are controlled using the **WTE Output Control Protocol**.

**Note:** Please refer to **Input Output Hardware Connection** section on this manual for examples of how to connect the input and output pins on the MReX board.

### \*OUT\_CONFIG

\*OUT\_CONFIG specifies all output configuration items, usage as follows:

\*OUT\_CONFIG=O:E,T <CR>

Where:

O = The output to configure (only 1 valid)

: = the character ‘:’

E = 1 to enable the set GPIO pin to an output.

T = time for output to close for in 100ms steps. E.g. 100 is 10 seconds. Max value is 32000. Setting to 0 disables the timer and output is latched indefinitely.

Example:

*\*OUT\_CONFIG=1:1,100<CR>*

### \*UNIT\_ID

\*UNIT\_ID specifies the output unit ID

\*UNIT\_ID=XX<CR>

where:

XX are any characters (up to 12 either numeric or alphanumeric) that are used to uniquely address each MReX when used in conjunction with the **WTE Output Control Protocol**. By default this ID is “01”, allowing numeric paging to be used to transmit messages.

Example:

*\*UNIT\_ID=01<CR>*

**Note:** Inputs can still be enabled while the GPIO is configured to be an output. This has been allowed to permit a message to be received, then reply immediately with a preprogrammed message that has been configured on that same pin. In this manner the MReX can transmit any message reporting when an output has changed state.



## Protocols

---

Serial input into and out of the MReX can be formatted differently by selecting an appropriate protocol.

### ***WT Protocol***

---

The **WT Protocol** is the default protocol used by WTE products. It allows for a variety of over the air transport methods (such as POCSAG paging) to be used and a variety of baud rates.

#### Transmitting Messages

Message format:

WTNNNNNNNABC<SPACE>MMMMM<CR>

Where:

**WT** are the 2 characters WT

**NNNNNNN** are 7 ASCII digits from 0000000-9999999

**A** is the Transport method:

A = POCSAG Alpha

N = POCSAG Numeric

D = DMR Text Message (directed to a group)

d = DMR Text Message (directed to an individual)

W= POCSAG WTE (WTE 8 bit format allowing all 8 bit characters to be transmitted)

**B** is the Level 1-9. Note that POCSAG only supports levels 1-4 which is the same as the “Beep Level”.

**C** is the data rate (specified in channel width ranges):

#### ***25 kHz Channel Space Settings***

0 = 512 Baud 2 Level FSK

1 = 1200 Baud 2 Level FSK

#### ***12.5 kHz Channel Space Settings***

A = 512 Baud 2 Level FSK

B = 1200 Baud 2 Level FSK



C = 2400 Baud 2 Level GFSK  
D = 4800 Baud 2 Level GFSK  
X = 9600 Baud 4 Level GFSK  
Y = 1800 Baud 2 Level GFSK

### 6.25 kHz Channel Space Settings

a = 512 Baud 2 Level FSK  
d = 4800 Baud 4 Level GFSK

<SPACE> is a single space character.  
MMM... is the payload, up to 240 characters.  
<CR> is the carriage return character

Example:

To send a 512 baud alpha message to 1234567 level 1 with payload of “TEST”

*WT1234567A10<SPACE>TEST<CR>*

After processing/transmitting responds with:

*WT[NNN]<CR>*

where:

NNN is the number of characters from W until, but not including <CR> , the test message above results in the following response

*WT[017]<CR>*

### Received Messages

All messages received come out via the serial port as configured in by the \*RX\_PROTO setting:

If \*RX\_PROTO=WTE then the output will look like:

*WT1234567A10<SPACE>TEST<CR>*

The exact same format allows units to be connected together, or protocols to be converted from one type to another.



## Support for Multiple Messages

The WT protocol allows for the same message to be sent to a variety of different radio types. This allows for an efficient way to send to several different RIC codes or technology types. Many message transmissions can be supported, until the max message length for the message is exceeded.

### Example:

To send the message “TEST” to RIC codes 1234560 and 1222222 as a 512 baud POCSAG message.

```
WT1234560A10WT1222222A10<SPACE>TEST<CR>
```

2 messages will be transmitted, batched in a single transmission.

*Note: The format is the standard WT Protocol format, but repeated without a space in-between headers.*

### Example:

To send the message “TEST” to RIC code 1234560 as a 512 baud POCSAG message and also a DMR message to group 1001, colour code 6 for a Hytera radio.

```
WT1234560A10WT0001001D60<SPACE>TEST<CR>
```

2 messages will be transmitted, as 2 transmissions. First message is in a POCSAG format, second transmission is in a DMR format.

### Example:

To send the message “TEST” to RIC codes 1234560 and 1222222 as a 512 baud POCSAG message and also RIC codes 0201234 and 0005647 as a 1200 baud POCSAG message.

```
WT1234560A10WT1222222A10WT0201234A11WT0005647A11<SPACE>TEST<CR>
```

4 messages will be transmitted, batched in 2 transmissions, one for 512 baud messages and another transmission for the 1200 baud messages.



## DMR Message Format

The WT Protocol can be used for sending DMR tier 1 messages. The protocol allows for an ID (group or individual), colour code, radio type and message to be specified.

Different DMR Radio manufacturers frequently have differing DMR implementations that often allows only same brand to same brand communication.

The WT protocol uses the commonly used “baud” field to set the DMR radio type. Sending a DMR message to an incorrect radio type may result in the radio not receiving messages, or the message being corrupted. Ensure that the group ID used is common to all same brand radios.

### Basic Format:

WT1234567D6x TEST\r

Where all fields are previously defined, but ‘x’ is now a DMR “Type”.

Type ‘0’ – This is a short message type, often used by Hytera.

Type ‘1’ – This is a short message type, often used by Kirisun.

### Example:

To send a DMR message to group ID 1001, colour code 6 with payload of “TEST MESSAGE” and to a type ‘0’ radio (Hytera)

*WT0001001D60<SPACE>TEST MESSAGE<CR>*

### Example:

To send a DMR message to individual ID 104, colour code 6 with payload of “TEST MESSAGE” and to a type ‘0’ radio (Hytera)

*WT00001041d60<SPACE>TEST MESSAGE<CR>*



## ***RAW Protocol***

---

The optional raw protocol uses all default settings to determine the data rate, transport method, cap code etc. This protocol is the protocol used when using a point to point serial link.

Default transmission settings are configured with the commands:

\*TX\_BAUD

\*TX\_CAP

\*TX\_LEVEL

In addition, the following command is used with RAW protocol:

### **\*RAW\_CONFIG**

\*RAW\_CONFIG specifies all RAW protocol parameters.

Format:

\*RAW\_CONFIG=A,BBB,CC<CR>

Where:

**A** specifies the time of inactivity timeout in 25ms steps before sending all stored data (max 255).

**BBB** specifies the number of characters to transmit at once. Messages exceeding the length can still be sent, but there will be a small delay between each transmission. Transmission delays may be longer than expected if the MReX determines that the channel is busy.

**CC** specifies an immediate transmission character (0 if unused). Decimal value of ASCII character (e.g. 13 for \r)

Example:

*\*RAW\_CONFIG=4,100,13<CR>*



## Serial Point to Point Operation

---

The MReX is well suited for use as a wireless point to point serial link when the optional Raw protocol is used.

In this application, the RAW protocol is used with a transport format that allows any ASCII character to be transmitted. Raw serial data in any format presented to the MReX is transmitted across the air and is output from a remote MReX. The behaviour of this feature is the same as if a serial wire cable would be fitted between the units.

A typical application for this feature would be the writing information to remote LED signs. The MReX can write to many remote units simultaneously.

In order to transmit serial characters, the MReX needs to be configured to know which ASCII character should be used to invoke an immediate transmission (or if any), the maximum number of serial characters to transmit at any time and how long after a period of inactivity any buffered data should be transmitted.

The rate that data is transmitted across the air varies based on application. Typically, slower over the air transmitted rates such as 1200 or 2400 will result in higher sensitivity of the receiver, making the possible distance between each MReX greater. By default the transmission baud rate is 4800. Data transmitted over the air has bit error correction included to improve immunity to noise.

The MReX will typically allow up to 300 characters to be transmitted at a time, with buffering capability to allow several messages of this length to be queued for rapid transmission.

If the buffering capacity of the MReX is exceeded then the MReX will respond with “FULL<CR>”.

Prior to each transmission the channel checks if the MReX is clear to transmit, meaning that in some cases transmissions could be slower depending on channel usage.

The MReX uses the default CAP code to identify each transmission, meaning that the MReX can either transmit to one or many other MReX units addressed individually or multicast to many at once.

The data transport method used includes bit error correction information, that allows for a more robust system, but decreases the effective data rate. Any over the air transmission rate will effectively be halved due to the additional bit correction data that is also transmitted.



Maximum over the air data rate is 9600 baud. Transmission time for a 100 byte payload at this rate is approximately 120mS.

**NOTE:**

While operating using the RAW protocol, the MReX will **NOT** respond to any configuration commands 10 seconds after start-up.

After the 10 second start-up delay the MReX will output “RAW ENABLED”. This is to prevent accidental misconfiguration during normal operation.

Within the first 10 seconds of operation, after processing any valid command, a further 10 seconds is allowed for processing any additional configuration commands.

**\*SERIAL\_LINK**

To Enable Serial Point To Point operation, the link can be set up quickly with the command

*\*SERIAL\_LINK<CR>*

This command will configure the following defaults (allowing use in 25, 12.5 or 6.25kHz channel widths):

*\*TX\_PROTO=RAW<CR>*  
*\*TX\_MODE=WTE\_EN<CR>*  
*\*TX\_CAP=1324560<CR>*  
*\*TX\_BAUD=4800-4L\_6<CR>*  
*\*RX\_PROTO=RAW<CR>*  
*\*RX\_MODE=WTE\_EN<CR>*  
*\*RX\_BAUD=4800-4L\_6<CR>*  
*\*RX\_RANGE=1:1324560, 1324560<CR>*  
*\*RAW\_CONFIG=4,148,0<CR>*

Now, set the required frequency to use, in this example 458MHZ:

*\*TX\_FREQ=458000000<CR>*  
*\*RX\_FREQ=458000000<CR>*

Either accept the default values set by the \*SERIAL\_LINK command or make changes as desired.



Finally, issue the command SAVE to permanently store the configuration

*\*SAVE<CR>*

#### **IMPORTANT NOTES:**

- \***TX\_CAP** for efficient transmission the CAP code should be any number that can be divisible by 8 without remainder.
- \***RAW\_CONFIG** *inactivity timeout* Transmission timer is reset after receiving every character, to allow transmission to wait this full period after the last character.
- \***RAW\_CONFIG** *immediate transmission character* accepts decimal value from 0-255 to configure a character such as 13 to immediately transmit on a '\r' character system. Setting \*RAW\_END=0 waits until the RAW\_TIMEOUT period expires before transmission

#### **Disabling SERIAL\_LINK**

If you wish to disable the RAW protocol:

1. Cycle power to the MReX
2. Issue the command *\*DEFAULTS<CR>*
3. Issue the command *\*SAVE<CR>*
4. *Issue the command \*REBOOT<CR>*



## Input Handling

---

**Note:** Please refer to **Input Output Hardware Connection** section on this manual for examples of how to connect the input and output pins on the MReX board.

The MReX supports 5 programmable inputs. Each input can be programmed with a short message up to 50 characters in length. Input messages must always be formatted as **WT Protocol**.

By default IO pins are all configured as inputs. The output function is determined by the \*OUT\_CONFIG command. See “**Output Handling**”.

On start-up each input is read. Only inputs that change from the start-up input state are processed.

Commands relating to input handling:

\*IN\_CONFIG\_H specifies all input transition to high level configuration parameters.

\*IN\_CONFIG\_L specifies all input transition to low level configuration parameters.

\*IN\_MSG\_H specifies the high level message that will be transmitted if configured.

\*IN\_MSG\_L specifies the low level message that will be transmitted if configured.

The \*IN\_CONFIG\_H and \*IN\_CONFIG\_L commands allow the input to specify:

- How many messages are transmitted once triggered.
- The debounce period (how long the input must be in a new state continuously in order to transmit) before the input is triggered.
- How long to wait until the message is retransmitted.

The \*IN\_MSG\_H and \*IN\_MSG\_L commands allow the input to specify the message which will be transmitted when the input is triggered.

### Full example:

In this example both inputs are configured to transmit only when moving from high to low (no high level transmissions). Transmit 5 times, 10 seconds between each transmission. Debounce period is to be configured to 2 seconds (input must have transitioned from a stable low level to constant high level for two whole seconds).

The protocol being used is WT protocol, and the message for each input message is “IN 1 LOW” and “IN 2 LOW”. Message is to be transmitted as POCSAG alphanumeric to cap code 1234560, beep level 1 and 512 baud.



Both Input 1 and 2 configured to disable all high level processing.

```
*IN_CONFIG_H=1:0,0,0<CR>
```

```
*IN_CONFIG_H=2:0,0,0<CR>
```

Both input 1 and 2 are configured as per the full example details above.

```
*IN_CONFIG_L=1:5,20,10<CR>
```

```
*IN_CONFIG_L=2:5,20,10<CR>
```

Configured messages to be transmitted once triggered.

```
*IN_MSG_L=1:WT1234560A10 IN 1 LOW<CR>
```

```
*IN_MSG_L=2:WT1234560A10 IN 2 LOW<CR>
```

High level messages can be set to anything since they are configured not to be used

```
*IN_MSG_H=1:<CR>
```

```
*IN_MSG_H=2:<CR>
```

For more details on command usage please refer to the Configuration section if required.



## Output Handling

---

**Note:** Please refer to **Input Output Hardware Connection** section on this manual for examples of how to connect the input and output pin on the MReX board.

All inputs can be configured to be outputs. Input/Output 1 additionally drives a separate open collector output pin to control loads of up to 100mA. All outputs operating from input pins have a 1K output impedance sourcing a maximum of 3.3mA.

There are 2 additional LED output pins. These are both open drain, allowing LEDs to be driven up to 100mA from a source voltage of up to 12V.

Outputs are configured using the commands:

\*OUT\_CONFIG

\*UNIT\_ID

The outputs are controlled through messages received that conform to the **WTE output control protocol**.

**NOTE:** Inputs can be configured to operate at the same time as outputs, allowing pre-programmed input messages to be transmitted when a message has been received to change the state of an output.

### OUTPUT PIN HARDWARE

The MReX output pin can sink a maximum of 50mA. If a larger load need to driven from this pin a current/voltage driver must be connected to the MReX module. Please refer to **Input Output Hardware Connection** section of this manual.



## WTE Output Control Protocol

---

### **Introduction**

This section describes how to control the outputs of WTE Products via transmission payloads.

The WTE protocol needs to be able to switch many outputs on, and many off in a single message. Receivers need to be able to be uniquely addressed, and in a manner that is maintainable.

It may be likely that the payload is transmitted as part of a paging payload, such as POCSAG or FLEX, but ultimately the transport method is irrelevant as long as it is capable of transmitting the characters used by the protocol.

Once an output has been activated, it will remain in its activated state for its configured period. This may be many seconds, or permanently latched.

The control message can be placed in any position in the message payload, and there can be multiple control messages in the same payload.

### **Format**

The payload of a message must fit the following format in order to operate the unit outputs. Note that this is a general format used by WTE products that may have many more than a single output.

[[ID]EEEE-DDDD]

Where:

[ is the character '['

] is the character ']'

**ID** is the UNIT\_ID that has been programmed (e.g "01" or "Unit\_A").

**E** is the output to enable (1 for the MReX).

- is the hyphen character '-' All digits following the '-' are outputs that are disabled

**D** is the output to disable



**Examples:**

Consider an MReX configured with UNIT\_ID of “Unit\_A” and configured as output:

```
*UNIT_ID=Unit_A<CR>  
*OUT_CONFIG=1:1,0<CR>
```

**Scenario 1:** To turn output 1 ON;

Message payload:

```
[[Unit_A]1]
```

**Scenario 2:** To turn OFF output 1;

Message payload:

```
[[Unit_A]-1]
```

Consider that we have several MReX Units and each one is configured with a different UNIT\_ID; “Unit\_A”, “Unit\_B” and “Unit\_C”

**Scenario 3:** To turn output 1 for Unit\_A:

Message payload:

```
[[Unit_A]1]
```

**Scenario 4:** We want:

- to turn output 1 ON in the Unit\_A,
- to turn output 1 ON on the Unit\_B,
- turn OFF output1 Unit\_C;

Message payload:

```
[[Unit_A]1] [[Unit_B]1] [[Unit_C]-1]
```

**Notes:**

- The unit will only process the Output Control Protocol for the unit configured in the UNIT\_ID and will ignore the other Output Control Protocol contained in the message
- Additional security to prevent false activation can be achieved through CAP restriction via the RX\_RANGE and/or a more complex UNIT\_ID.



## Remote Command Output Format

The WTE output control protocol allows the direct control of remote units. This allows specific MReX units to accept commands or protocols for processing “over the air”. Care must be taken issuing commands that leave the MReX unable to process further remote commands (such as changing frequency, RIC range, modulation settings).

[[ID]U0[AA]]

Where:

[ is the character ‘[’

] is the character ‘]’

ID is the *UNIT\_ID* that must match the MReX to be controlled.

U0 are the characters “U0” (U followed by zero) and is used to indicate that directed content for processing follows.

### Examples:

Example applications for this may be:

- Restarting of a remote unit
- Changing configuration of a remote unit over the air
- Retransmitting a message at a different rate.

**Example 1** - To restart a remote unit:

Remote unit configured to have *UNIT\_ID* of “UNIT-10”.

Message payload:

[[UNIT-10]U0[\*REBOOT]]

**Example 2** - To change a RIC range on a remote unit:

Remote unit configured to have *UNIT\_ID* of “UNIT-10”.

Message payload:

[[UNIT-10]U0[\*RX\_RANGE=1:1234560,1234567]]



**Example 3** - To transmit a message only from a specific remote unit:

In this case, the remote unit is configured to accept WT protocol.

Remote unit configured to have UNIT\_ID of “UNIT-10”.

Message payload:

```
[[UNIT-10]U0[WT1234560A10 Test Message]]
```

The message transmitted by UNIT-10 will be “Test Message” at 512 baud, but the message may have been received at a different configured baud rate.

Application of this may be:

A full network operating in a telemetry mode may be transmitting data at 9600 baud. This method allows a message to be sent through the network at high speed, yet still able to be retransmitted from a specific unit at a standard low rate for a common POCSAG belt pager.



## Store Forward Operation

---

The MReX can operate as a stand-alone repeater to forward paging messages and also extend wireless serial operation. This is an optional feature for the MReX that is not supplied by default.

Transmit and receive configuration should be configured to be the same when forwarding messages. \*RX\_PROTO should equal the \*TX\_PROTO and \*RX\_MODE should equal \*TX\_MODE.

Typically the MReX would be configured as follows:

Delay of 2 second before forwarding, reject duplicate messages for 10 seconds.

```
*STORE_FWD=20,10<CR>
```

Ensure all store forward units have RX\_RANGES set to allow all possible CAP codes that are of interest to forward.

The duplicate reject feature is essential key to use when the MReX is been used in a multi-hop store forward system. If this is set to 0, rejection of duplicated messages are not possible, and messages may bounce back and forward between repeaters.

Multiple repeaters can be used, but increase message delivery time. Use of more than a single repeater in a system is generally less than ideal and typically more powerful transmitters should be used if multiple store forward repeaters are required.

See the Configuration section on this document for more details on command usage if required.



## Installation

---

The MReX should be situated away from direct sunlight, extreme vibration and heat sources, and high power transmission sources.

An external aerial correctly designed to operate at your intended frequency of operation will result in best performance. Do not situate the aerial immediately next to the aerial of a high power transmission source – position greater than 2 M from any other aerial. Mount the external aerial with as much elevation as possible for best results (see “Aerial Elevation” below).

Maximum tolerated input power into the RF connector is 13 dBm. Levels above this will destroy the receiver RF input and invalidate the unit warranty.

The MReX is a static sensitive system module, and not intended for use without protective devices on inputs or output.

**ESD precautions must be observed at all times when handling.**

## *Cables Supplied*

---

By default NO cables are supplied on purchase. Because there are so many possible frequencies and variations in installation an aerial is NOT supplied by default. If an aerial is supplied, it will be a generic variety that will not perform as well as an aerial produced for the intended frequency of operation, or a high gain externally mounted type.


If cables are to be supplied, this must be ordered at time of purchase.

## Connecting to the MReX

---

The minimum required connections for a usable system:

1. Connection to an antenna.
2. Power supply of 5-9Vdc connected to pin 12 or 3V battery connected to pin 18.
3. Connection to a GND pin.

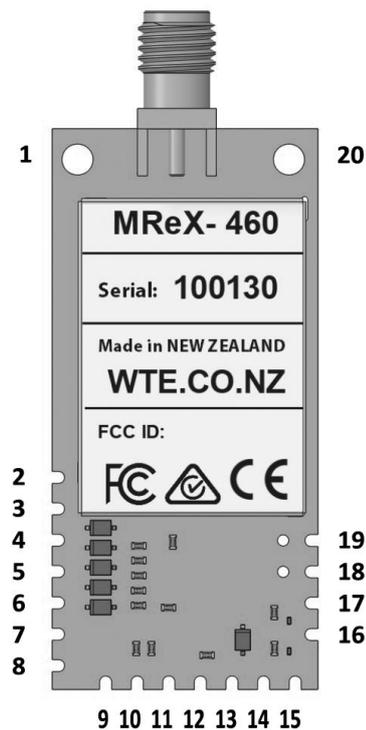

SMA connector is female type. The module must be connect to a 50 ohm antenna designed for use at the intended frequency of operation.

The MReX module can be mounted on header pins or soldered hard against another PCB.

There are multiple GND connection pins available. A minimum of one must be used for the supply GND. The others may be connected to GND or not connected and used as module mounting support.

Inputs are protected with input diodes and internal weak pull up resistors. To operate inputs tie to GND.

SMA connector locking nuts must be used to prevent forces applied to the antenna from placing stress on soldered connections.

## Module Pin descriptions

---


Inputs/Outputs Pin Number	Description
1	GND
2	GND
3	Input/Output – Digital 5
4	Input/Output – Digital 4
5	Input/Output – Digital 3
6	Input/Output – Digital 2
7	Input/Output – Digital 1
8	Output – Digital 1 (open drain)
9	TX Serial TTL (out 3.3V)
10	RX Serial TTL (in 3.3V)
11	GND
12	Power IN + (5-9Vdc, 150mA)
13	GND
14	GND
15	LED 2. (open drain). Red Transmit.
16	LED 1. (open drain). Green Status.
17	GND
18	Power IN + Battery (3V)
19	GND
20	GND

## Input Hardware Connection

Examples following describe how to connect external devices to the MReX input/output pins.

### Input Example 1:

Switch connected directly to an MReX input with ESD varistor. Other ESD protection methods are permissible, but should follow accepted normal guidelines taking into account the likelihood of exposure to ESD events.

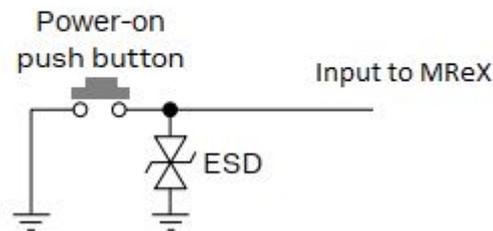


ESD typical device should clamp at approximately 5Vdc.


### Input Example 2:

Inputs are driven high or low from an external source. Inputs will tolerate a maximum of 3.3Vdc as a high input level. The external driving source must have a 0V GND common to the MReX.

#### Input Low Trig

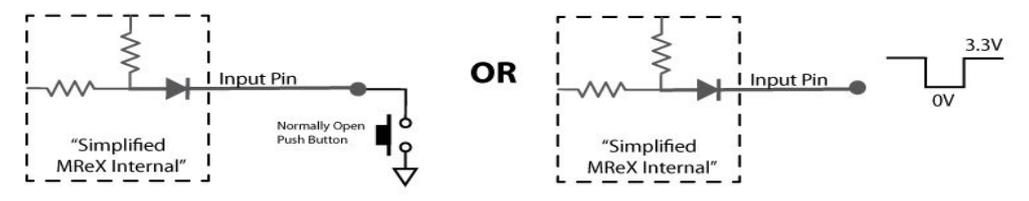


#### Input High Trig

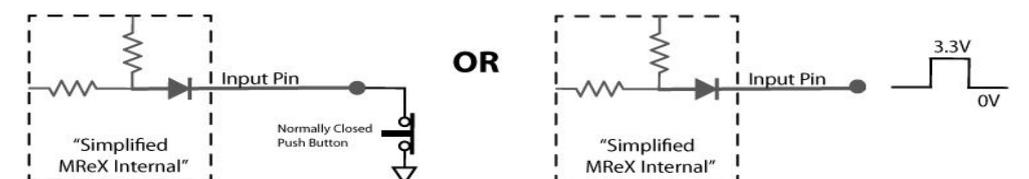

## Output Hardware Connection

### Output Example:

Shown in the example below is the equivalent MReX internal electronics of the output that is shared with input 1. The output is an open collector suitable for sinking a maximum of 50mA. The example is being used to drive an LED from an external supply. Should the output be presented to potential ESD conditions (such as any terminal screw or external connection), ESD devices should be fitted. If the output is to be used to control a small relay, it is essential that a flyback diode is fitted across the coil of the relay.

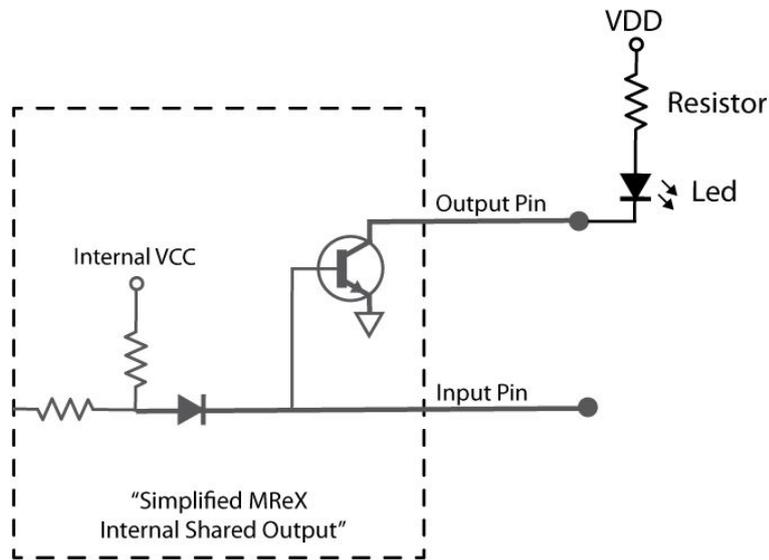


*MReX Output Shared with Input 1*

## MReX Mounting Details

The MReX is a surface or through hole mountable module. The module dimensions are shown in the following image. PCB thickness is 1.2mm.

### Top view

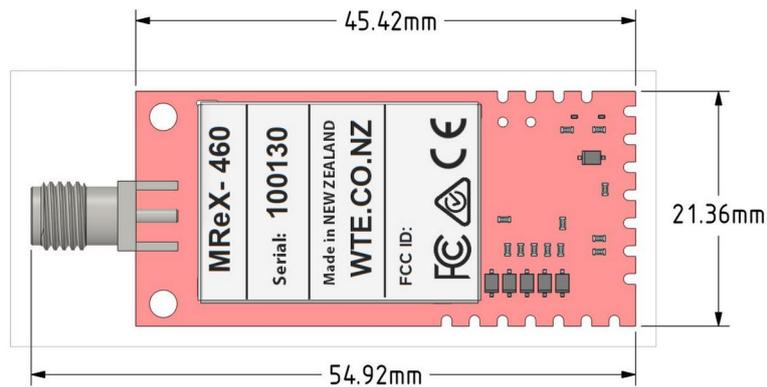


### Side View



**Note:** Images are not to scale. Minor differences to the SMA connector may be possible depending on manufacturer variations and tolerances.

**Recommended PCB Footprint**

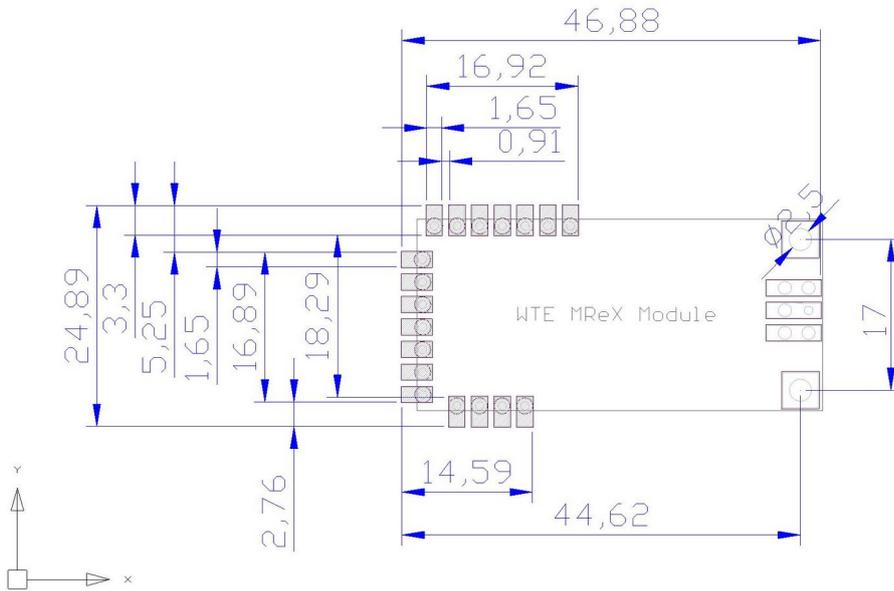

All dimensions are in millimetre (mm)

Please visit the MReX page on the [www.wte.co.nz](http://www.wte.co.nz) for Gerber footprint and DWG CAD files.



## **OEM Integration**

---

The use of the MReX as a module must obey the following OEM (Original Equipment Manufacturer) instructions in order to comply with FCC regulations.

### **Power Supply**

The power supply circuit affects the RF compliance and must comply with the followings:

When connected to the “**Power IN +**” pin 12 of the MReX:

- VCC nominal voltage must be 5 to 9 Vdc
- VCC voltage drop during Tx slots must be lower than 100mV
- VCC voltage ripple during Tx in the supply pins must be minimized. High supply voltage ripple values during RF transmissions directly affect the RF compliance.
- VCC under/overshoot at start/end of Tx slots should be absent or at least minimized.

When connected to the “**Power IN + Battery (3V)**” pin 18 of the MReX:

- VCC nominal voltage must be 3Vdc
- VCC voltage drop during Tx slots must be lower than 100mV
- VCC under/overshoot at start/end of Tx slots should be absent or at least minimized.

### **Generic Digital Interfaces**

When connecting inputs and outputs, documented connection guidelines in this manual must be followed while considering specified electrical limits.

The MReX UART interface is a 3-wire (TX, RX and GND) 3.3V unbalanced asynchronous serial interface, supporting:

- Device configuration,
- Data TX and RX, when operated as serial link,
- Firmware upgrades.

### **Antenna RF interfaces requirements**

The MReX module must be connected to an antenna with an impedance of 50 Ohms, through the SMA female connector. The antenna must not have a gain greater than 6dBi.



### **Label and compliance information**

The product designed using the MReX as module must contain a label showing the MReX FCC ID: 2ASGC-MREX460, this label must follow the FCC label rules.

This includes advising host product manufacturers that they need to provide a physical or e-label stating “Contains FCC ID” with their finished product. See Guidelines for Labelling and User Information for RF Devices – KDB Publication 784748.

## MReX Firmware Upgrade


In order to update the MReX firmware you will need:

1. The WTE Bootloader Tool (available from <http://www.wte.co.nz> or provided if required from [info@wte.co.nz](mailto:info@wte.co.nz)).
2. Serial TTL cable.
3. An appropriate encrypted hex file supplied by WTE Limited.

*Note: Attempting to load a hex file not intended for use with the MReX will render the MReX inoperable. Uploading firmware should only be performed if instructed to do so by WTE Limited or an authorised agent.*

### Firmware Upgrade Utility


This bootloader software has been customised by WTE to simplify the firmware replacement process for the MReX, This application automatically handles erasing and verifying of uploaded firmware. This utility does not perform any decryption function (decryption is carried out by the MReX itself).

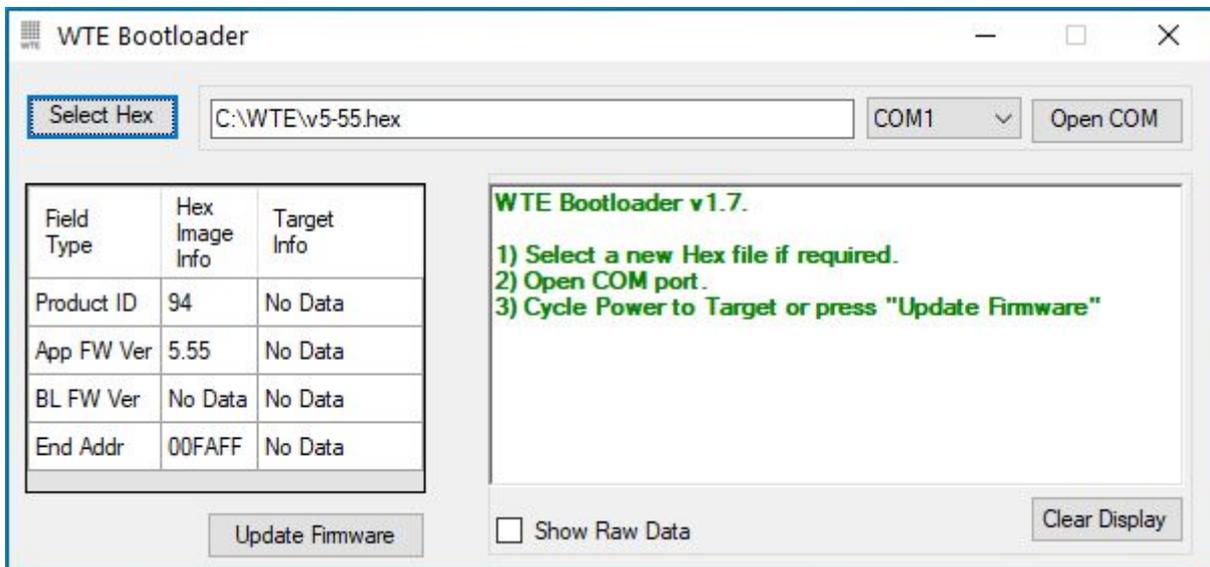



## Firmware Upgrade Process

1. Run the application WTEBoot.exe – this is the WTE Firmware Update Tool as shown above.
2. MReX must be powered and connected to a TTL serial cable, please refer to **Connecting to the MReX** section of this manual for more information.
3. Press the “**Select Hex**” button on the WTE Firmware Update Tool and select the appropriated MReX firmware file.
4. Confirm that the App FW Ver displayed is the version described in the file name.
5. Select the correct COM port on the WTE Firmware Update Tool
6. Press “**Open COM**” button on the WTE Firmware Update Tool
7. Press a button that will result in a transmission, and then keep that button pressed.
8. Press “**Update Firmware**” on the WTE Firmware Update Tool to send the new firmware to the MReX.
9. Button may be released now.
10. Wait for the WTE Firmware Update Tool to indicate that programming has been completed.

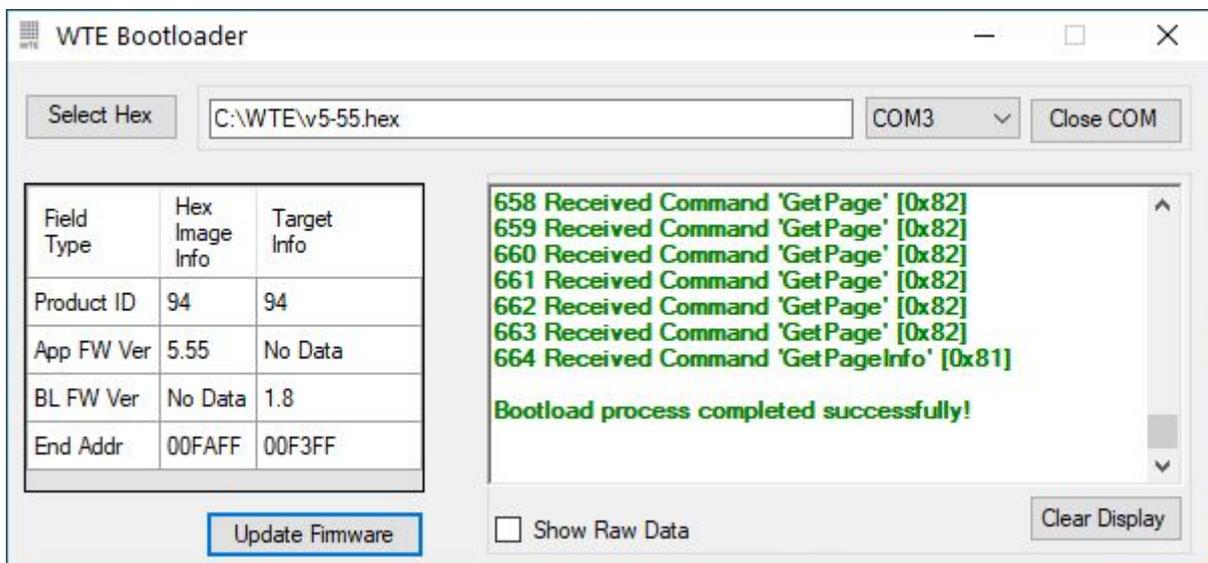

The MReX now is ready and the WTE Firmware Update Tool can be closed.



## Antenna

---

It is common in radio systems to consider an omni or directional antenna. Both have their advantages and disadvantages as follows.

If in doubt, consult a local aerial specialist who will be able to advise and construct an aerial best suited to your application.

### ***Omni antenna***

Omni antenna have the advantage of transmitting and receiving signals equally well in all horizontal directions. This means that if the transmitter or the receiver moves, the antenna will not need to be changed/adjusted to compensate.

This is the common antenna used in cellular phones and handhelds radios.

### ***Directional antenna***

Directional antenna have the ability to focus energy in a particular direction. This advantage increasing the maximum distance between transmitter and receiver units. Since the signals are focused/concentrated into a direction it also increase the overall performance of the system.

This is mainly used for fixed transmitter and receiver locations.

### ***Antenna Elevation***

As with any radio receiver, raising the height of either the transmitter or receiver antenna will result in dramatic improvements to the maximum possible receive distance. Although a high power transmission will increase distance, the installed height of the receiver antenna is the key to a high performing system.

When close to the ground the major obstacle to overcome, since radio signals are mainly “line of sight”, is the curvature of the earth. The typical distance to expect can be approximately calculated as follows:

$$D = \sqrt{\frac{2r_0 h_f}{6076.1 \beta_0}}$$



Where:

- $D$  is the distance to the horizon in NM,
- $r_0$  is the mean radius of the earth (3440.1 NM),
- $h_f$  is the height of your antenna,
- $\beta_0$  (0.8279) accounts for terrestrial refraction.

This formula can be simplified to:

$$d = 1.17 * \sqrt{h_f}$$

Where:

- $d$  = range in nautical miles,
- $h_f$  = the height of your antenna in feet.

Working with metric units this formula becomes:

$$km = 2.17 * \sqrt{0.305 * h_m}$$

Where:

- $km$  = range in kilometres,
- $h_m$  = the height of your antenna in metres.

Therefore:

Antenna Elevation (metres)	Clear Line of Sight Distance (km)
1	1.2
5	2.7
100	12

The Antenna Elevation is the combined elevation of both the transmitter and the receiver (transmitter at 1m and receiver at 9m will behave similarly as the transmitter at 5m and receiver at 5m.

Changes in power level will help to address a less than ideal antenna or poor line of sight conditions.

When line of sight or elevation is poor, the range can also be approximately doubled with every



6dB increase in link budget (either increase in TX power, or increase in RX sensitivity).

From testing, these ranges can be expected from a **20dBm** transmitter at the indicated elevation.

(credit to [www.offshoreblue.com](http://www.offshoreblue.com) for some range calculation details)



## Disclaimer

---

THE RESPONSIBILITY LIES COMPLETELY ON THE USER TO ENSURE THAT THIS DEVICE IS TESTED, THROUGH METHODS THAT ARE APPROPRIATE, TO CONFIRM THAT ALL SYSTEM COMPONENTS (THAT THIS DEVICE AND PC SOFTWARE MAY BE PART OF) ARE WORKING CORRECTLY.

This document has been prepared in good faith and produced to assist in the use of this product, however WTE Limited reserves the right to modify, add or remove features without notice.

When product is supplied, it is the user who is responsible for payment of any customs fees/taxes that are imposed on importation.

**Please note that the maximum permitted transmit power level may vary from country to country. It is the users responsibility to ensure local regulations are adhered to.**

No User-Serviceable Components. There are no user-serviceable components within the radio

### RoHS and WEEE Compliance

MReX is fully compliant with the European Commission's RoHS (Restriction of Certain Hazardous Substances in Electrical and Electronic Equipment) and WEEE (Waste Electrical and Electronic Equipment) environmental directives.

### Restriction of hazardous substances (RoHS)

The RoHS Directive prohibits the sale in the European Union of electronic equipment containing these hazardous substances: lead, cadmium, mercury, hexavalent chromium, polybrominated bi-phenyls (PBBs), and polybrominated diphenyl ethers (PBDEs).

### End-of-life recycling programme (WEEE)

The WEEE Directive concerns the recovery, reuse, and recycling of electronic and electrical equipment. Under the Directive, used equipment must be marked, collected separately, and disposed of properly.



## **Manufacturing marking and labels**

---

MReX serial number can found on the unit, also serial number and model information are sent to serial on start-up.

## **Maintenance**

---

No User-Serviceable Components. Servicing is only to be performed by WTE Limited, or agent appointed by WTE Limited. Servicing outside of the warranty period is at the discretion of WTE Limited.

## Product End Of Life

---



It is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and help ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling contact your local dealer or city council



Please recycle this device responsibly.



## Product Warranty

---

WTE Limited products are warranted for a period of 12 months after purchase date against faulty workmanship or materials. Return the product, all freight paid by the customer and the product will be repaired or replaced.

The MReX can be damaged through improper handling and system integration. ESD handling precautions must be observed.

The product warranty will be invalidated through evidence of:

- Unauthorised work carried out.
- Tampering, including evidence of removal of internal electronics from the case.
- Installation in wet or corrosive environments.
- Exposure to impact or excessive vibration.
- Use or installation outside of the specified operating parameters.
- Use in any system or product without the inclusion of ESD or over voltage protection devices.



## Specification

---

### Frequency Range:

- MReX-460: 421 - 480 MHz

### Tx/Rx Frequency Accuracy:

- 0.5ppm. 235Hz max error at 480MHz over entire temperature range.

### Fixed Supply Voltage

- 5-9V Internally fused at 250mA (not self resetting)

### Battery Supply Voltage

- 3V. Internally fused at 250mA (not self resetting)

### Inputs

- Five. Inputs accessible when used as a module. To operate tie to GND. Max input voltage is 3.3V. Inputs are lost when configured to operate as an outputs.

### Outputs

- Open drain out 1 pin (controlled from output 1) – open drain, max current 100mA. Max voltage 12Vdc.
- Input/Output 1-5. Output impedance 1K (max current 3.3mA). Max voltage 3.3Vdc.
- LED1, LED2 – open drain, max current 100mA. Max voltage 12Vdc.

### Message length

- Input max configured message length 80 characters

### Temperature Limits

- -10 to + 55 degrees Celsius.

### Max Tx Power (+/- 1dB)

- 20dBm (100mW)

### Max Rx Input Power

- 13dBm (any level above this will destroy the receiver)

### Receiver Sensitivity (+/- 1dB) @ 450MHz

- -126 dBm (512 baud),
- -124 dBm (1200 baud),

### Max message length

- Up to 5 messages with 128 character can be queued for decoding or transmitting.

### Antenna Connector



- SMA female.

## Operating Current

- 21mA receiving, up to 95mA transmitting into matched 50 ohm antenna.
- <2uA in transmit only standby when used with external supply (wake on input change).
- <300nA in transmit only standby when used with 3V battery (wake on input change).

## Firmware

- Field upgradable.

## Physical Dimensions (L x W x H)

- MODULE without SMA connector is 45mm X 21mm X 5mm

## Serial Output

- Serial 9600:8-N-1 baud.
- WTE protocol format.

## POCSAG Encode and Decode Support

- POCSAG 512 either alpha or numeric including batched.
- POCSAG 1200 either alpha or numeric including batched.
- POCSAG 2400 either alpha or numeric including batched.
- Adjustable POCSAG preamble from 64 to 5000 bits (576 default).

## DMR Support:

- Partial ETSI TS 102 361-1 (Tier 1 direct mode).
- Short Message type, unconfirmed.
- Max message length 50.
- Tested DMR radios:  
Hytera – PD565, Kirisun DP770, Kirisun TM840H

## Modulations Supported:

### 25kHz Channel Width:

512 baud (FSK 4.4kHz), 1200 (FSK 4.4kHz)

### 12.5kHz Channel Width:

512 baud (FSK 2.2kHz), 1200 (FSK 2.2kHz), 1800 (GFSK 3kHz), 2400 (GFSK 2.2kHz), 4800 (GFSK 2.2kHz), 9600 (4GFSK 650Hz/1.95kHz)

### 6.25kHz Channel Width:

512 (GFSK 1.1kHz), 4800 (4GFSK 325Hz/975Hz)

## Compliance Standards:

- EN 300 224-2. (base station and mobile transceiver compliant).
- EN 301 489,
- EN 62368
- EN 50385
- FCC part 90.217



- AS/NZ 4769

Laboratory Test Results

- Base and mobile station compliant. Testing completed March 2020.



## Declaration of Conformity



**Manufacturer:**

*Wireless Technologies (WTE Limited)  
Christchurch, New Zealand*

WTE Limited hereby declares the MReX Telemetry, Data and Messaging Transceiver module satisfies all the technical regulations applicable to the product within the scope of Directive 2014/53/EU (Radio Equipment Directive) of the European Parliament and Councils.

**The products covered by this declaration:**

MReX-460, MReX-5B, MReX-SF and MReX-5IO

**The basis on which conformity is being declared:**

The products identified above comply with the above directive based on lab testing results from the EMC Competent Body: EMC Technologies (NZ) Ltd.

The manufacturer has applied the following harmonised standards:

- **EN 300 224-2. (base station and mobile transceiver compliant).**  
Electromagnetic compatibility and Radio spectrum Matters (ERM); On-site paging service
- **EN 301 489-1 V2.1.1 (2017-02)** Electro Magnetic Compatibility (EMC) standard for radio equipment and services.
- **EN 62368-1:2018** Safety of information technology equipment
- **EN 50385:2017** RF exposure compliance for base station equipment.

The CE mark was first applied in: May 2020

Contact:

Shannon Reardon or Rodrigo Pellizzari

[info@wte.co.nz](mailto:info@wte.co.nz)

Date: 05/05/2020

Shannon Reardon  
Engineer/Director

Rodrigo Pellizzari  
Engineer/Director